



SECURITY & FIRE SYSTEMS

### SENSOR TEST:

- SENSOR TEST IS GREAT TO CHECKING THE GAP ON DOOR CONTACTS, CHANGING BATTERIES IN TRANSMITTERS, WIRELESS SMOKE DETECTORS, ETC.
- CALL HOME SECURITY MONITORING COMPANY AND PUT YOUR ACCOUNT ON TEST
- HOME SECURITY: 1.800.933.4762 (STOWE,VT)
- HIT 8 + (YOUR SYSTEM MASTER CODE) + 3
- YOUR KEYPAD WILL BEEP, INDICATING THE SENSOR TEST IS ON (YOU HAVE 15 MINUTES IN SENSOR TEST)
- YOU CAN ALWAYS RENEW THAT 15 MINUTES BY SIMPLY REPEATING THE FOLLOWING STEPS:
  - 8 + (YOUR SYSTEM MASTER CODE) + 3
- EACH TIME YOU TAMPER WITH A DETECTOR OR SENSOR (OPEN A DOOR OR REMOVE A SMOKE DETECTOR TO CHANGE THE BATTERIES) THE KEYPAD WILL BEEP AND DISPLAY THE NAME OF THAT PARTICULAR ZONE; INDICATING IT IS COMMUNICATING AND SEES THE DEVICES.
- ONCE YOU ARE DONE TESTING DEVICES / CHANGING BATTERIES, HIT THE FOLLOWING TO GET OUT OF SENSOR TEST:
  - DISARM + (YOUR SYSTEM MASTER CODE)
- THE KEYPAD WILL BEEP AND GO BACK TO THE HOMESCREEN (TIME AND DATE)
- ONCE YOU'RE DONE TESTING YOUR SYSTEM – CALL HOME SECURITY MONITORING AND PUT YOUR SYSTEM BACK ON-LINE.